

950 Preventative Maintenance


(Should be conducted once a month to extend the life of the printer)




Turn power off
To the 950 printer




Open Printer Cover

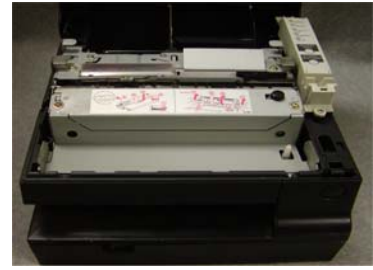

Remove Ink Ribbon

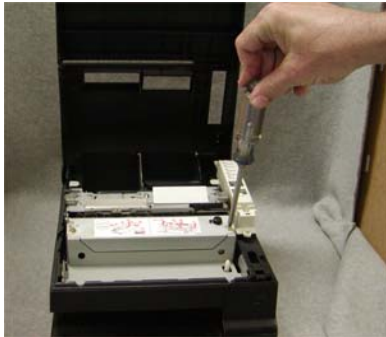

Remove Right Brass Screw from
Head Assembly Cover

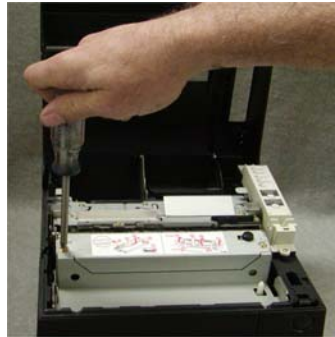

Remove Left Brass Screw from
Head Assembly Cover



Remove Head Assembly Cover



Remove any Loose Paper
From Printer Drive Unit



Compressed Air in a can.
ESCO# 402-0001




Blow **ALL DUST** out of the
Printer Head Assembly
Compartment



CONTINUE to Blow **ALL DUST** out of the Printer Head Assembly Compartment



CONTINUE to Blow **ALL DUST** out of the Printer Head Assembly Compartment

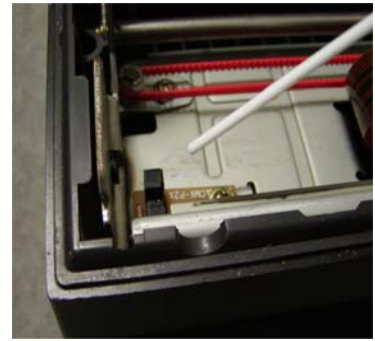


Make sure to Blow **ALL DUST** out of the HOME POSITION OPTO.



Make sure to Blow **ALL DUST** out of the PRINER TIMING OPTO.



Lightly LUBE the PRINT HEAD CARRIAGE SHAFT (3 in 1 Oil works perfect for this job)

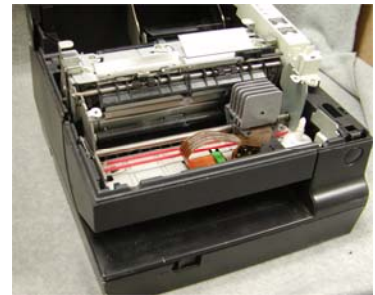

After LUBING the Carriage Shaft - Sweep the Print Head Left to Right. Repeat this action 4 times.

Reassemble Printer in reverse order.
Make sure the Ink Cartridge is in good working order
We have seen a number of ink cartridges jam up internally which
In turn locks the 950 printer up and then goes into a mechanical error
Turn power back on to the 950 printer
You are now ready to begin to print.